ARAT Telephone mount

Type: BMW "X5"

Part No: 1306

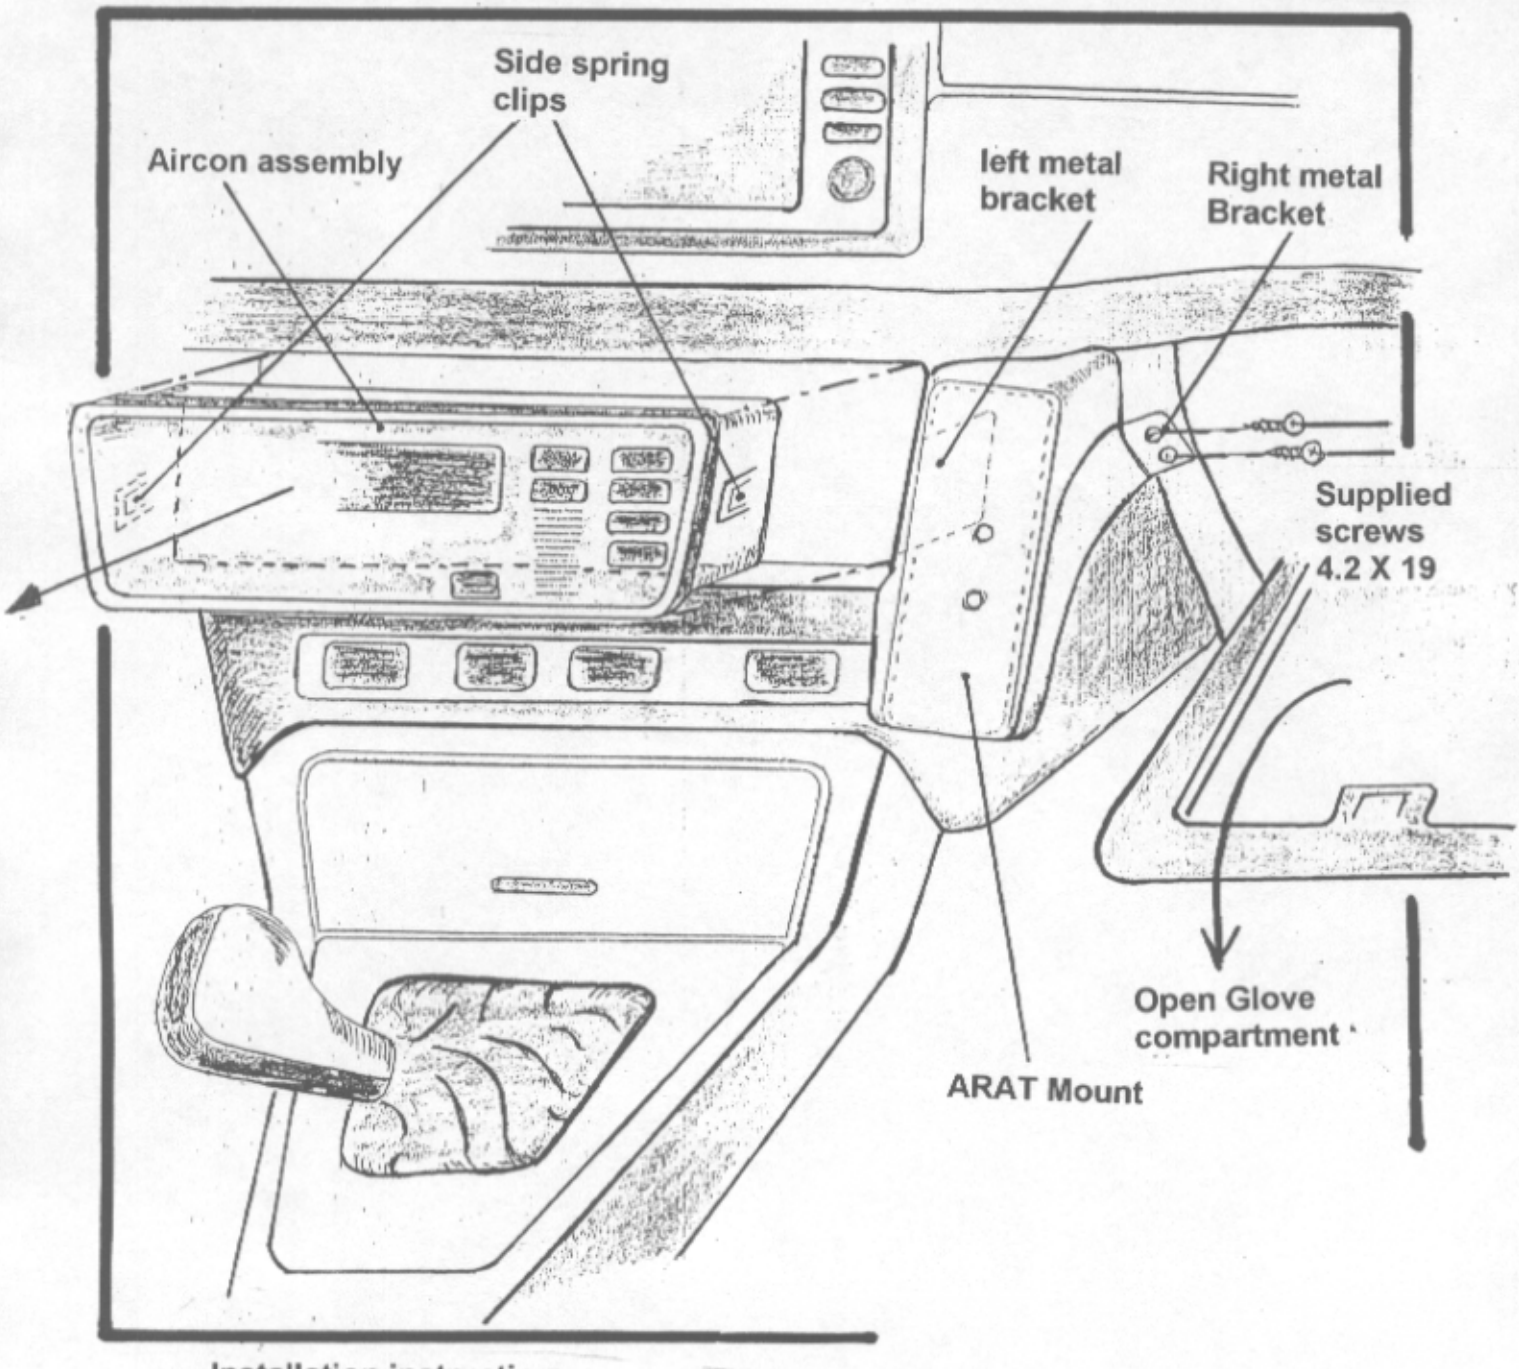


## Installation instruction

1. Remove the aircon control unit from the dashboard, by prizing the side spring clips inwards and removing the unit
2. Open the glove compartment and place the ARAT mount to the contours of the dashboard, and slide the left hand bracket in the side of the housing of the aircon assembly
3. With the supplied screws secure the mount through the right hand metal bracket into the side lip of the glove compartment (pre-drill Ø 2mm)
4. Replace the aircon assembly